


WIRING DIAGRAM

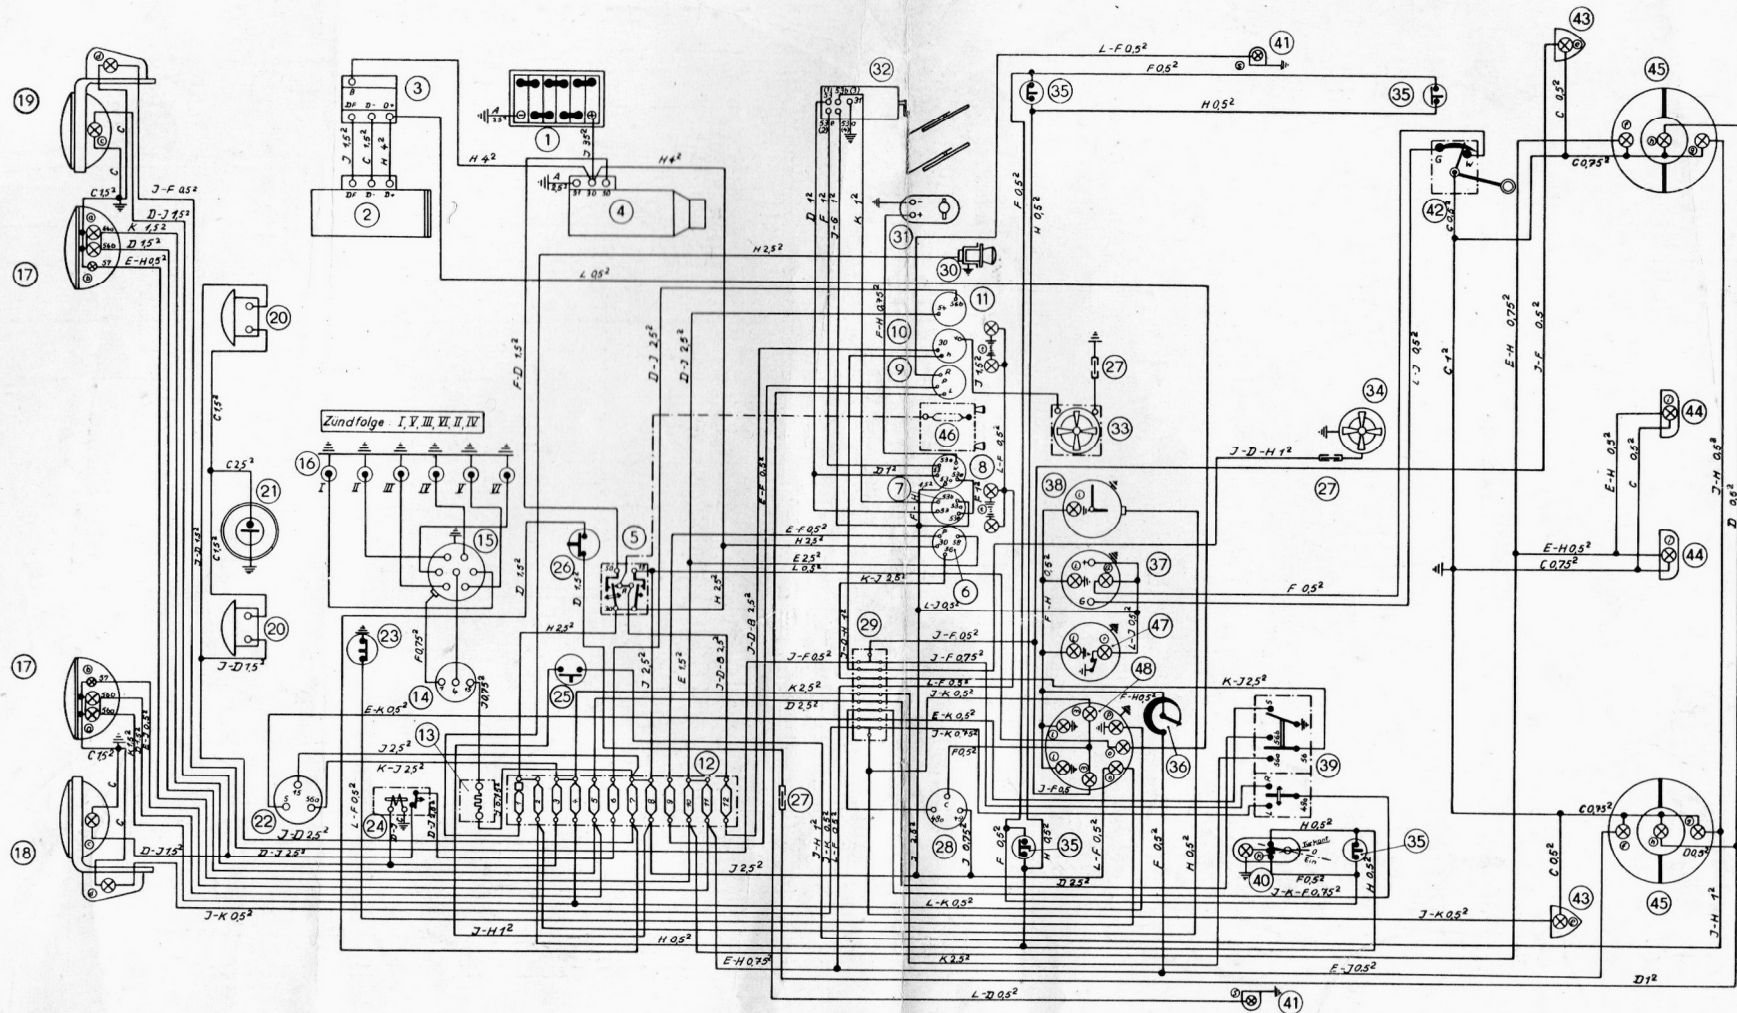

- 1 Battery, 12 v. 52 amp/hr
- 2 Dynamo, Bosch LJ/GG 240/12/2400 R 8
- 3 Voltage controller, Bosch RS/UA 240/12/33
- 4 Starter, Bosch EGD 1/12 AR 2
- 5 Steering and ignition lock
- 6 Lighting switch
- 7 Wiper-motor switch
- 8 Washer-motor switch
- 9 Parking-lights switch
- 10 Heater-motor switch
- 11 Fog lamps switch
- 12 Fusebox, 12 fuses
- 13 Series resistance to ignition coil, Bosch ZWJ 11 Z 4 Z

- 14 Ignition coil, Bosch TK 12 A 10
- 15 Ignition distributor, Bosch VJ R 6 BR 62
- 16 Spark plugs, Bosch W 175 T 1 (cementless) or Beru 175/14 (cementless)
- 17 Main beam, left and right
- 18 Foglamp and blinkerlamp, left
- 19 Foglamp and blinkerlamp, right
- 20 Dual-tone horns, left and right
- 21 Signal ring (on steering wheel)
- 22 Blinker unit to main beam, Hella EH 1777-12 max: 100 w.
- 23 Oil-pressure switch
- 24 Foglamp relay, Bosch SH/SE 21/2
- 25 Brake-light switch

- 26 Reversing lamp switch
- 27 Connector socket, uni-polar
- 28 Blinker unit, Bosch SH/BVD 12 B 7 or Hella 91 P St 2x21 CP-12 V
- 29 Connector-socket ledge
- 30 Cigarette lighter
- 31 Windscreen-washer motor SWF No. WP E 22
- 32 Windscreen-wiper motor, Bosch W5/JC 2/12 (2/3)
- 33 Heater motor, Bosch KM/RCA 10/12/3100 R
- 34 Blower motor 12 v. 4 w. 2500 rpm
- 35 Courtesy lights switch, left and right
- 36 Potentiometer
- 37 Fuel gauge

- 38 Electric clock
- 39 Blinkerlamp and dipping switch with headlamp flasher switch
- 40 Interior lighting
- 41 Sidelights, left and right
- 42 Fuel gauge tank unit and warning contact
- 43 Blinkerlamps, left and right
- 44 Number-plate lights
- 45 Tail lamp, brake lights and reversing lamp
- 46 Car radio (special equipment)
- 47 Instrument-board thermometer
- 48 Speedometer

- Colours of wiring leads:**
- A = exposed
 - B = blue
 - C = brown
 - D = yellow
 - E = grey
 - F = green
 - G = mauve
 - H = red
 - J = black
 - K = white
 - L = light-blue